




User Manual

28 Ports Gigabit Managed
Layer 3 SFP Switch with 10G SFP+ Slots
ST-M2408TS-4X


Packing List

- Ethernet Switch
- User Manual
- Power Cable
- Bracket kits

Product description

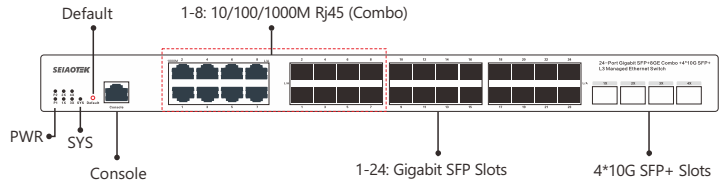

Indicator light	Status	Description
PWR	ON	Switch power supply is normal
	OFF	The switch is not powered on or the power supply is abnormal
Link/Act	ON	Port is connected
	Flashing	Port is transmitting data
	OFF	The port is not connected, or the connection is abnormal
SYS	Flashing	The switch is working normal
	OFF / ON	The switch is not power / switch working abnormal

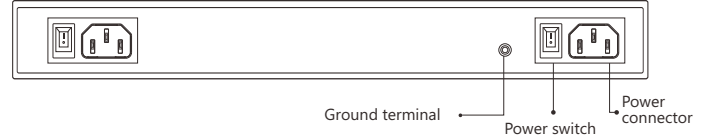

Interface/button	Description
Ethernet ports	1-8: Gigabit Rj45 ports, Support Auto-MDI/MDIX function.
SFP Slots	1-24: Gigabit SFP Slots. (1-8 SFP Slots Shared with 1-8 Rj45 ports)
10G SFP+ Slots	1X-4X: 10G SFP+ Slots.
Console	Console port: Connect the Serial Cable to the Serial port of the computer to manage and configure the switch.
Default	Restart or reset buttons: Press and hold this button around 10 seconds, the switch will recovery to factory settings.
Ground terminal	Connect the protective ground wire to prevent lightning strikes.
Power connector	Connect the power cable with the switch.

Device Installation

Installation Precautions

To avoid damage to the switch or personal injury caused by improper use, please follow up the below precautions:

1. During the installation procedure, wear an anti-static wristband, keep the switch powered off. Ensure that the input voltage under the input voltage range.
2. Ensure that the heat dissipation holes of the switch are well ventilated.
3. Do not disassemble the switch.
4. Do not supply power to the switch before cleaning it. Do not use any liquid to scrub the switch.
5. Keep the switch far away from power lines, lights, and power grids.

Note

A tamper-evident seal is sealed on a mounting screw of the switch chassis. When the agent maintains the switch, the maintenance switch is required. The seal remains intact. If the user needs to open the switch case, please obtain the permission of the local agent. Otherwise, due to all consequences caused by opening the cabinet will be borne by the user himself.


Prepare the installation tools

1. Static bracelet
2. Screw driver
3. Optional: flat-blade screw driver, needle-nose pliers, diagonal pliers


Install the switch into a 19-inch standard cabinet

Step 1: Check the grounding and stability of the rack-mountable.

Step 2: Use the screws to fix the two L-shaped brackets on both sides of the switch.

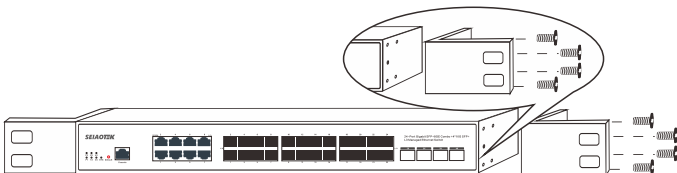


Step 3: Place the switch in a proper position in the rack, and fix the L-shaped brackets on the guide grooves at both ends of the rack with screws (if users required) to ensure that the switch is installed on the rack smoothly

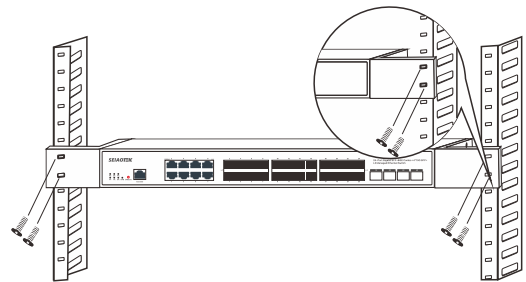

Install the switch to the desktop


After sticking the foot pads on the four corners of the bottom surface of the switch, please place and keep the switch face up on the stable desktop.

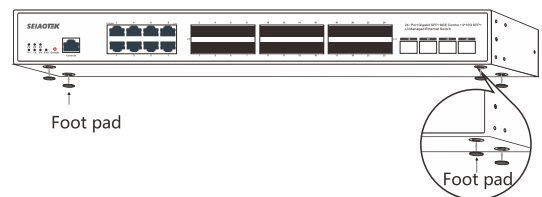

Hardware connection

Connect 10G SFP+ Slots

- Step 1:** Grab the handle end of the optic fiber module, confirm that the handle of the optic fiber module facing upwards, and then insert the optical module into the 1X-4X SFP+ port of the switch.
- Step 2:** After confirming the Rx and Tx ports on the optic fiber module, insert the two fiber connectors at one end of the fiber into the Rx and Tx ports of the optical module respectively, and then plug the two fiber connectors at the other end of the fiber into the opposite device. Tx and Rx ports.

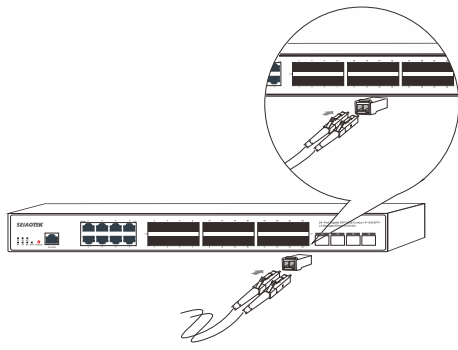


Connect RJ45 port

Connect one end of the network cable to the RJ45 port of the switch, and the other end to the RJ45 Ethernet port of the opposite network device.

Connect to the console port


Connect the RS232 DB9 male end of the serial cable to the computer, and connect the RJ45 end to the Conport port of the switch.

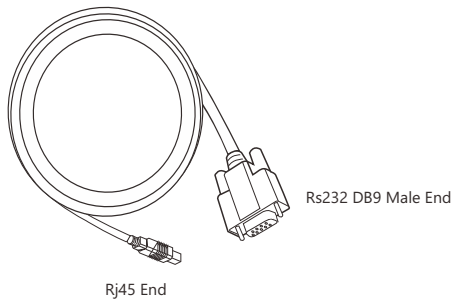


Connect the ground wire

Step 1: Connect one end of the ground wire to the ground terminal of the switch.

Step 2: Connect the other end of the ground wire to other equipment that has been grounded, or directly connect it to the ground bar of the equipment room engineering terminal.

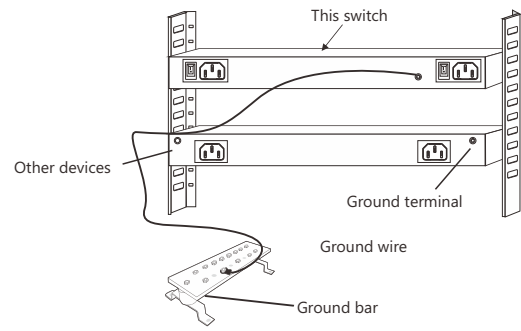

Or

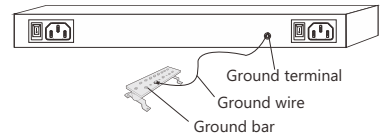


Note

The ground wire of the switch should be connected to the engineering ground of the equipment room. The grounding fire water pipe and the lightning rod of building are not properly grounded.


Log in to the WEB Management Page

1. Connect the computer to the switch through a network cable.

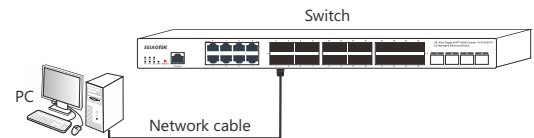


2. Set the computer's local IP address to 192.168.1.X (X is 2~254, and is not occupied by other devices), and the subnet mask is 255.255.255.0.

3. Open the computer's local browser (take IE as an example), enter <http://192.168.1.1> into the address, and press Enter to log in Switch Web Management page.



4. Enter the user name and password (the default is admin), and then click the login button.

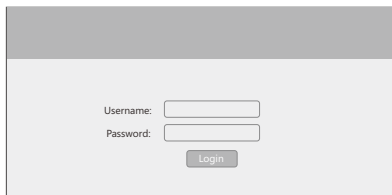

5. Log in to the switch web management page and start to configure the switch.

Common Tips

What should I do if I can't log in to the switch's web management page?

Please try the following solutions:

Confirm that the switch is powered on.

1. Confirm that the computer and the switch network cable are connected properly.
2. Confirm that the computer's Ethernet (or local connection) IP address has been set to 192.168.1.X (X is 2~254, and it is not occupied by other devices).
3. Clear the cache of the browser, or change the browser, and confirm that the connection method of the browser is never dial connection.
4. Turn off the computer's firewall or replace a computer.
5. Confirmed that there is no other devices whose IP address is also 192.168.1.1.
6. If you still cannot log in after the above operations, please restore the factory settings.

The specific operations as follows:

7. When the Power indicator is on, press and hold the Default button on the front panel of the switch around 10 seconds.
8. Release when all the indicators are on. When the Power indicator keeps on or the SYS indicator flashing again, the factory settings recovery successfully.

Specifications

Name	28 Ports Gigabit Managed Layer 3 Fiber Switch with 10G SFP+ Slots	
Model	ST-M2408TS-4X	
Interface	Ethernet Ports	1~8: 10/100/1000M Rj45 Ports (Shared)
	SFP Slots	1~24: Gigabit SFP Slots (1~8 Slots Shared)
	10G SFP+ Slots	1X~4X: 10G SFP+ Slots
LED	PWR , Link / Act	
Processing Types	Store-and-forward	
	Half-duplex back pressure and IEEE802.3x full-duplex flow control	
Performance Specification	Bandwidth	128Gbps
	Packet Forwarding Rate	95.23Mpps
	MAC Address	32K
Network Standards	IEEE802.3i 10BASE-T IEEE802.3u 100BASE-TX IEEE802.3ab 1000BASE-T IEEE802.3x Flow Control, IEEE802.3az EEE IEEE802.1p, IEEE802.1x, IEEE802.1d, IEEE802.1s IEEE802.3z 1000BASE-LX, IEEE802.3x 40GBASE-R	
Power Input	AC 100~240V 50~60Hz	
Dimension	440mm (L) x 285mm (W) x 44mm (H)	
Cables	UTP Cat 5 or above	
Environment Specification	Working Temperature: 0°C ~ 45°C, Humidity: 10% ~ 90% RH non-condensing	
	Storage Temperature: 20°C ~ 70°C, Humidity: 5% ~ 95% RH non-condensing	

Warranty Card

Model NO.	
Serial NO.	
Purchase Date	
RMA Number	
Return Reason	
Customer Name	
Customer Address	
Customer Email	

Note: Please refer to the User Manual for Detail Warranty policy